

### AlarmNet Standard Diagnostic Codes

CODE	INTCOD	DESCRIPTION
D1	341	LOW SIGNAL STRENGTH
D2	342	FREQUENCY ERROR
D3	343	MODULATION ERROR
D4	344	SUBSCRIBER JAMMED ON
D5	345	REPEATING ALARM
D6	346	REDUNDANT SUPERV.
D7	347	NODES ARE DOWN
DA	348	REDUND.SUPERV.RESTOR
DB	349	MULT.NODES ARE DOWN
DC	350	AUTHEN. TAMPER
DD	351	AUTHEN. NO RESPONSE
DE	352	AUTHEN. VIOLATION
DF	353	AUTHEN. INITIALIZED
RA	181	RESTORE AC POWER LOS
RB	182	RESTORE LOW BATTERY
RC	183	RESTORE SYS. FAIL
RD	184	RESTORE TIMER RESET
RE	185	RESTORE COMM.CH.FAIL
RF	186	RESTORE PHONE LINE
RG	348	SYSTEM SUPERVISORY RESTORE
RH	187	RESTORE SENSOR TEST
TA	103	STANDARD POWER FAIL
TB	120	LOW BATTERY ALARM
TC	178	SYSTEM FAIL/TIME-OUT
TD	179	TIMER RESET/POWER ON
TE	180	COMM.CHANNEL FAIL
TF	71	TELEPHONE LINE FAULT
TG	346	SYSTEM SUPERVISORY FAULT
TH	300	SENSOR TESTING
<b>Conditions in ENTERPRISE</b>		
GD	354	TOWER TEST PASS
BD	355	TOWER TEST FAIL
AD	???	AUTOMATIC TOWER TEST
TS	???	FIELD TRIGGER TEST