## **Contact ID (CID) Format Explained**

## Typical Contact ID messages will look like the following:

E13201C002 or E13201002 R13401C003 or R13401003 E40101U006 or E40101006

The message can be broken down into fields:

Event Qualifier	Event Code	Partition	Zone Qualifier	Zone/Contact/User
Е	132	01	С	002
R	134	01	С	003
Е	401	01	U	006

## These are read as:

An event 132 was received in partition 01 in zone 002. A restoral of event 134 was received in partition 01 in zone 003. An event 401 was received in partition 01 by user 006.

Note: The Zone Qualifier field is not always displayed. This will not affect the meaning of the alarm message.

Note: You do not define the Zone Qualifier when defining the condition; simply leave it out.

## The possible values of these fields are as follows:

Event Qualifier:	E - New Alarm/Event R - Restoral P - Previously reported Event		
Event Code:	Any of the Contact ID codes – see Contact ID Event Code Table on Dealer Literature Page		
Partition:	01 – 99		
Zone Qualifier:	C - the three digits that follow are the Zone number U - the three digits that follow are User number		
Zone/Contact/User.	000 – 999		