

DMP Diagnostics

Aaa	Alarm where aa=area in alarm	IS47	Zone swinger automatically reset
Baauu	Bypass where aa=area and uu=user	IS48	WARNING: Low battery cutoff-LAST MESSAGE
CFaa	Force Arm where aa=area	IS49	WARNING: System supervisory trouble
CGaauu	Close area where aa=area and uu=user	IS50	WARNING: Supervised wireless trouble
CLuu	Close where uu=user	IS51	WARNING: Zone interrogation trouble
DGuuaa	Area access where uu=user and aa=area	IS52	Signal disabled by operator
IAallc	Equipment where a=action, ll=loop and c=condition	IS53	Bell fuse restored
IBaa	Failure where aa=area	IS54	WARNING: Unsuccessful remote connect
ICuu	Temporary schedule modification where uu=user	IS55	Internal message
IDuu	Verification where uu=user	IS56	Control panel trapped -- Connect now
IEmmmm	Serviceman where mmmm=man number	IS57	Message pending -- please disconnect
IFuu	Permanent schedule modification where uu=user	IS58	ALARM: Panel Substitution
IGoonn	Change code where oo=old code and nn=new code	IS59	WARNING: Substitution/Checkin overflow
IHaauu	Reset where aa=area and uu=user	IS60	WARNING: Redundant receiver failure
IJaauu	Open where aa=area and uu=user	IS61	WARNING: Communication trouble -- Line 1
IS00	A.C. power restored	IS62	WARNING: Communication trouble -- Line 3
IS01	Standby battery restored	IS63	WARNING: Communication trouble -- Line 3
IS02	Communication line level restored	IS64	WARNING: Communication trouble -- Line 5
IS03	Panel tamper restored	IS65	WARNING: Communication trouble -- Line 5
IS04	Backup communication line restored	IS66	System test begin
IS05	Panel ground restored	IS67	System test end
IS06	System not armed by scheduled time	IS68	Receiver printer failed
IS07	Automatic recall test OK	IS69	Receiver printer restore
IS08	WARNING: A.C. power failure	IS70	End of history buffer
IS09	WARNING: Low standby battery	IS71	Request for receiver time and date
IS10	WARNING: Low communication line level	IS72	Warning: Network trouble
IS11	WARNING: Panel tamper	IS73	Network restored
IS12	WARNING: Panel back up communication failure	IS74	Alarm: Tamper during armed state
IS13	WARNING: Panel ground fault	IS75	SIMS Operator acknowledgment failure
IS14	WARNING: Non-alarm message flow	IS76	SIMS Operator acknowledgement restored
IS15	**Ambush**	IS77	ALERT: Unauthorized entry
IS16	WARNING: Panel not responding	IS78	ALERT: System recently armed
IS17	Panel response restored	IS79	ALERT: Signal during opened period
IS18	ALARM: Zone alarm overflow	IS80	ALERT: Exit error
IS19	WARNING: New panel on line	IS81	DDMX - Connect
IS20	ALARM: Carrier locked on line	IS82	DDMX - Disconnect
IS21	TROUBLE: Message not acknowledged	IS83	Remote programming complete
IS22	Carrier off, Multiplex line restored	IS84	Remote command received
IS23	Panel test signal received	IS85	DDMX - Redundant
IS24	TROUBLE: SCS1 Test signal not received	IS86	WARNING: Local programming
IS25	SCS1 Power up signal received	IS87	WARNING: Transmit fail
IS26	WARNING: Auxiliary Fuse Trouble	IS88	Automatic recall OK - Unrestored system
IS27	Auxiliary fuse restored	IS89	Supervised wireless restored
IS28	WARNING: Telephone line 1 trouble	IS90	WARNING: Unrecognized message
IS29	Telephone line 1 restored	IS91	Service requested
IS30	WARNING: Telephone line 2 trouble	IS92	System Message 92
IS31	Telephone line 2 restored	IS93	System Message 93
IS32	WARNING: Trouble alert silenced	IS94	System Message 94
IS33	Trouble alert returned to normal	IS95	System Message 95
IS34	WARNING: Alarm bell silenced	IS96	System Message 96
IS35	Alarm bell returned to normal	IS97	System Message 97
IS36	Time/Date set by operator	IS98	SCS-1 Memory full
IS37	Security information management startup	IS99	System check
IS38	WARNING: Bell circuit trouble	OGaauu	Area open where aa=area and uu=user
IS39	Bell circuit restored	OPuu	Opening where uu=user
IS40	ALARM: Fire zone alarm overflow	OTaa	Late area opening where aa=area
IS41	ALARM: Panic zone alarm overflow	Raa	Restore where aa=area
IS42	ALARM: Burglary zone alarm overflow	Taa	Trouble where aa=area
IS43	WARNING: Bell fuse trouble	UCuunn	Add user code where uu-user and nn-new user
IS44	WARNING: Fire-Burglary trouble overflow	UXuudd	Delete user code where uu=user dd=del user
IS45	Abort signal received		
IS46	Zone swinger automatically bypassed		